

Assembly & Operating Instructions

Ironmaster Organizer

Congratulations on your purchase of this fine Ironmaster product. For any technical questions or support please contact us at 1-800-533-3339. Be sure to read and understand the operating instructions.

Item List:

Part #	Part Name	Description	Qty
1	BASE LEG	Square tube with rubber end caps	2
2	BASE CENTER TUBE	Square tube with flat brackets welded on each end	1
3	SPINE TUBE	Long rectangular tube with welded hooks	1
4	NUTS	M10 Hex lock nuts	6
5	BOLTS	M10 x 70 mm bolts	6
6	WASHERS	M10 flat washers	6

Steps:

1. To assemble the Organizer, first unpack all components and locate the hardware kit.
2. Assemble the BASE CENTER TUBE to the two BASE LEGS using four of the M10 bolts, nuts and washers. Washers only go under the Nut – one washer per bolt and nut assembly. Leave Nuts hand tight.
3. Assemble the SPINE TUBE to the BASE CENTER TUBE using two of the M10 bolts, nuts and washers. Bolts must be inserted from under the bottom side of the BASE CENTER TUBE so that the nuts are on the top for floor clearance.
4. Place base flat on the floor and tighten all the remaining bolts and nuts. *Note: Nuts have a plastic lock inside and will require a wrench on both the head of the bolt and on the nut to completely tighten.*

Operation:


The Ironmaster Organizer is designed to hold most of the optional attachments and accessories for the Super Bench and IM2000 Self Spotting Machine. Some misc. items may not fit on the Organizer. You may also find different ways to hang parts on the Organizer depending on personal preferences and which attachments you have. The Calf Block and Freebar Holders fit well on the floor inside the frame base.

Note: Take care with small children since some items can be pulled off and could cause injury.

Warranty Information:

Your Ironmaster Organizer has a limited 10 year warranty to the original purchaser. Warranty covers repair or replacement for mechanical integrity when used according to the instructions for normal exercise use. Warranty covers in home use only. Finish and wear items such as rubber and painted surfaces are not covered. If you need warranty service, contact Ironmaster for return instructions and additional terms and conditions.

Ironmaster, LLC 21828 87th Ave SE, Unit E Woodinville, WA 98072
Ph: 800-533-3339 Fax: 425-483-2868 www.ironmaster.com

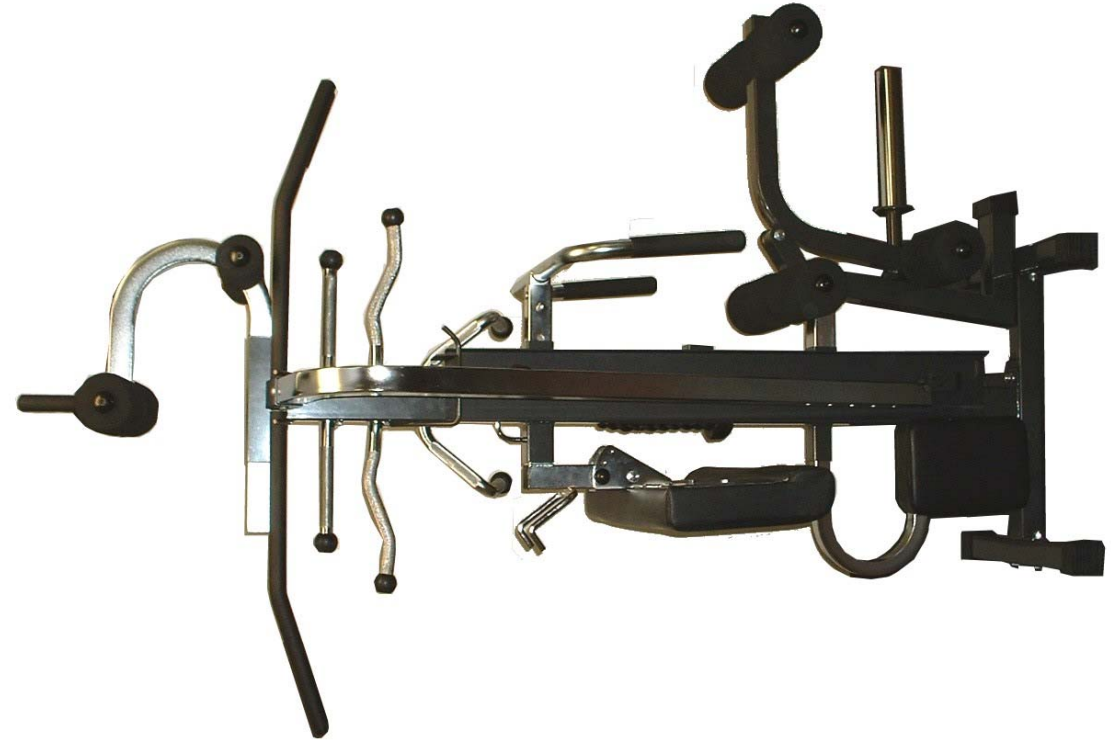

**Ironmaster, LLC 21828 87th Ave SE, Unit E Woodinville, WA 98072
Ph: 800-533-3339 Fax: 425-483-2868 www.ironmaster.com**