


# ASSEMBLY INSTRUCTIONS IM 950, IM 1000

Congratulations on your purchase of the Ironmaster. The next few pages will aide you in assembling your machine. Only tools that are required are two adjustable wrenches. The first thing that you want to do is to unpack all of your boxes and make sure that you have received all of your parts. The part list below will help you in this. If you are missing anything or if anything is damaged call Ironmaster right away and we will happy to help you out. Once again thank you for your purchase and enjoy your Ironmaster knowing you have bought the best home gym on the market.

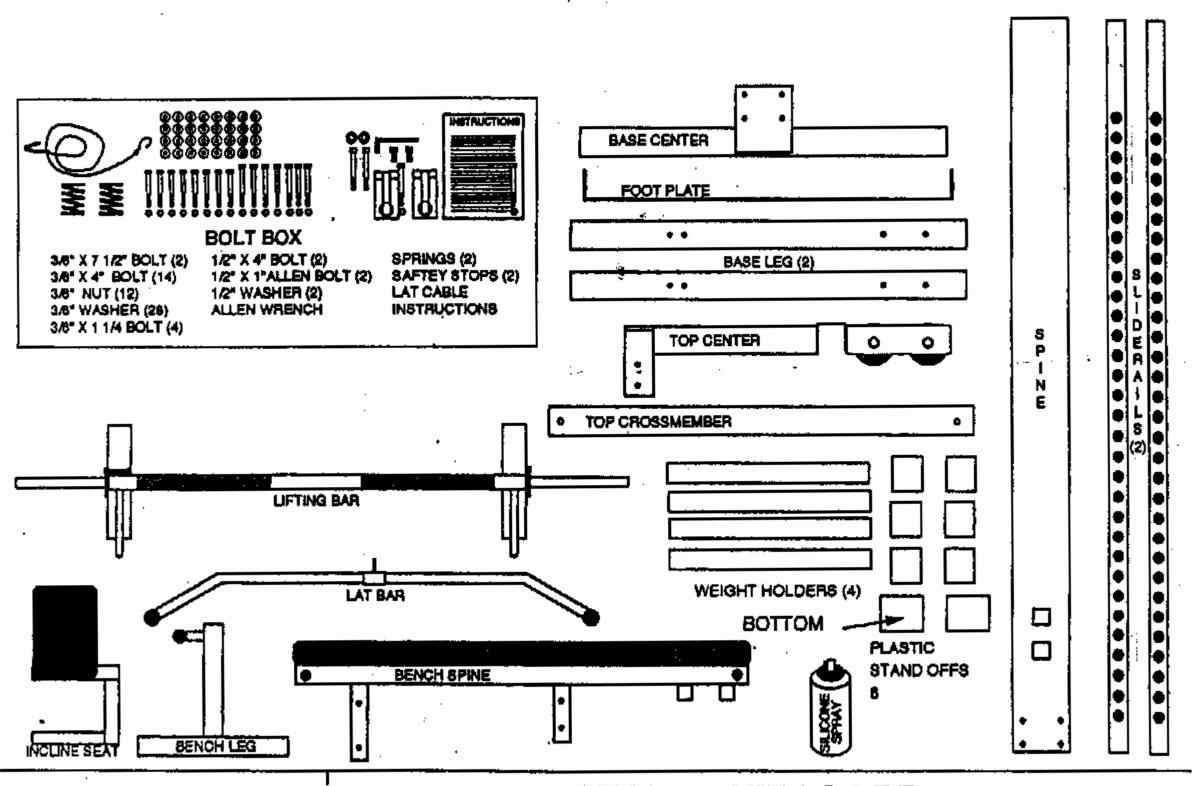


Comments or Suggestions:


Please fill out and mall the the Warranty card on the right. The Ironmaster comes with a five year warranty covering all structural and mechanical parts. The cable and upholstry are covered for one year and the iliting bar sliding system for 10 years. Please write down any comments or suggestions as we are always trying to improve are product.


# **WARRANTY CARD**


Name:
Involce#:
Date Purchased:
Where Purchased:
Which Ironmaster do you have? IM1000 IM500 IM 950

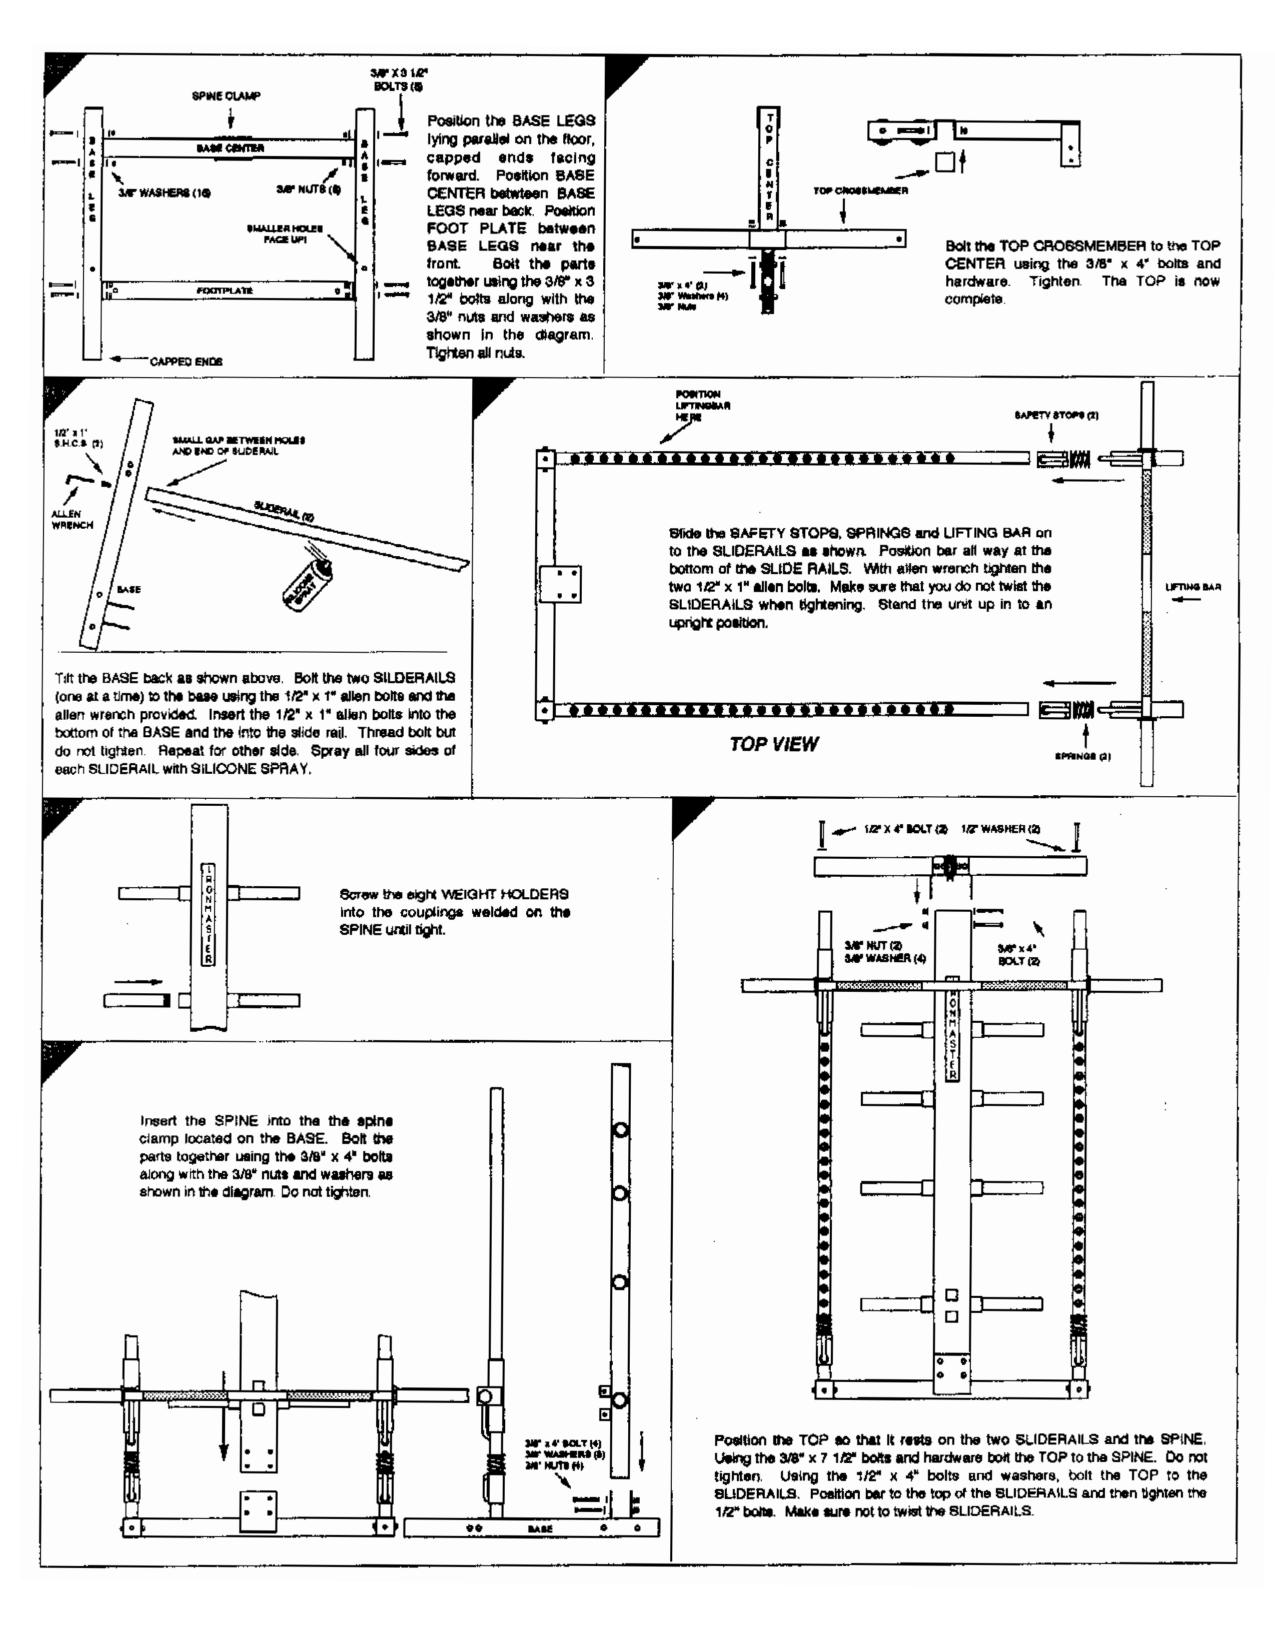

# HOW TO LINE UP THE IRONMASTER

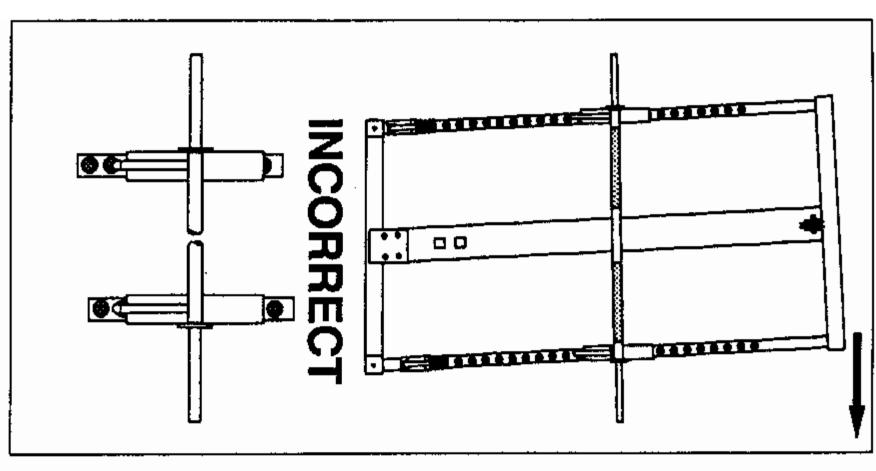


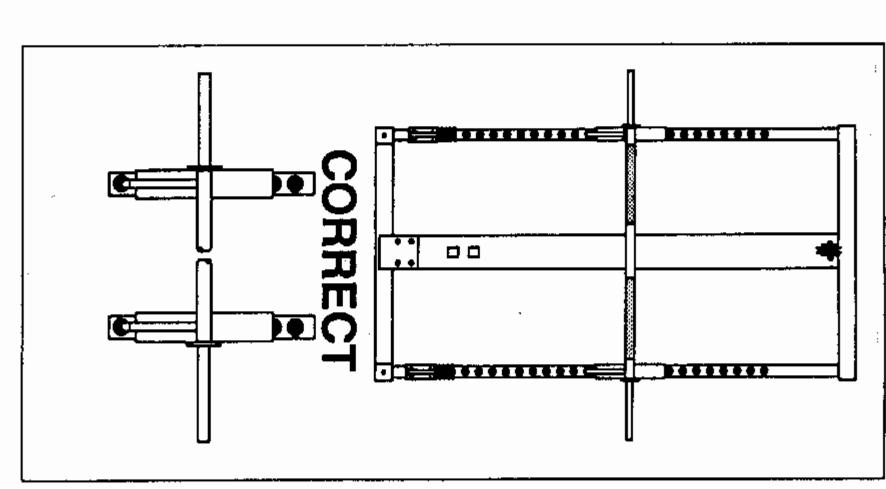

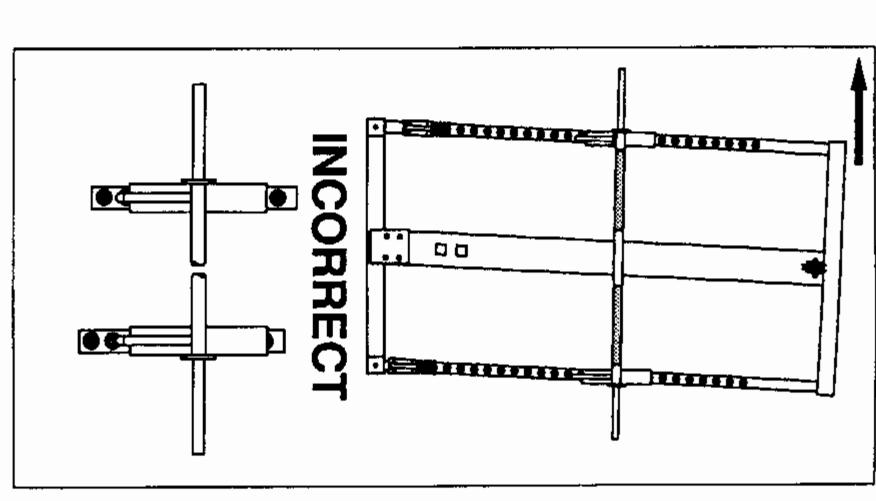


Which ever way your machine is out of alignment, tweak the machine in the direction of the arrow. push on the frame, check for alignment of the pins. Once the machine is lined properly tighen holes on the slide rails a the same point! If they do not you must align your machine. Refer to you to line up the machine to ensure proper tracking. The lock out pins on the ironmaster Liftin problems with this step, please call Spartan Mfg. and someone will be happy to assist you. (408) may be necessary to have someone hold the machine in place while the bolts are being tightened. If you have any The Ironmaster Lifting Bar will bind if the machine is not aligned correctly during assembly. It 988-8182. all remaining bolts. It the illustration above. g Bar MUST enter the will be necessary for Each time you

### **BENCH POSITIONS**

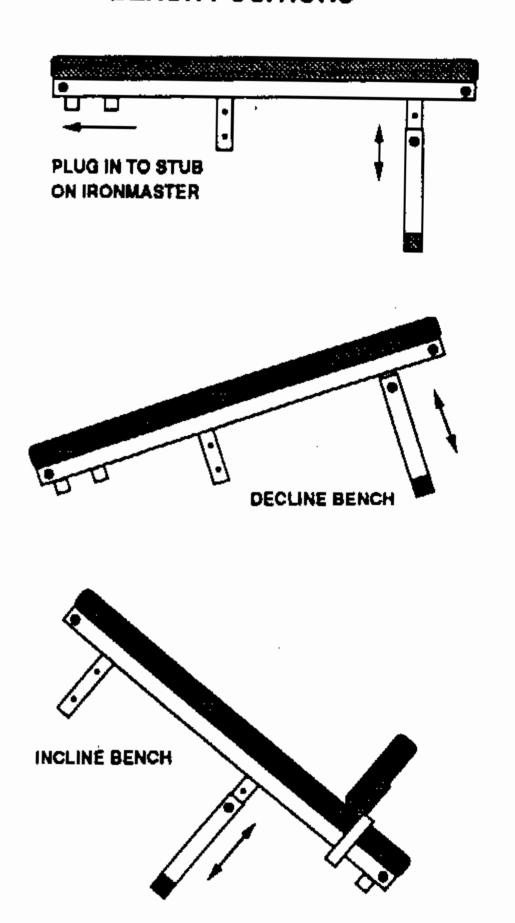

## LAT CABLE ROUTING

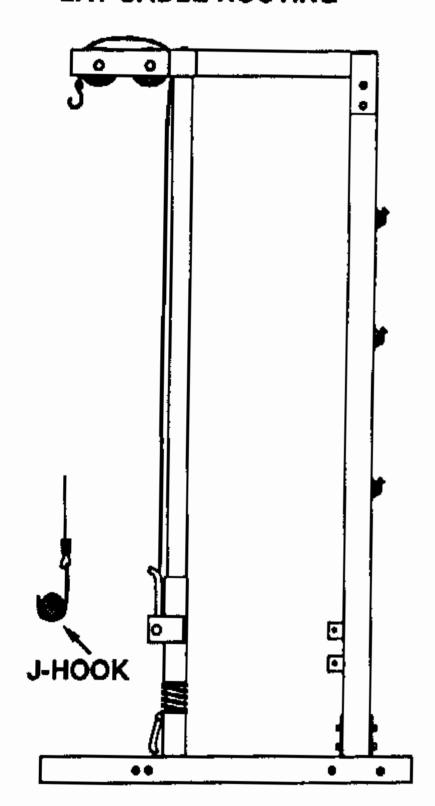

Place Lock Out Pins in the cable position. Hook J-hook on to bar, route cable from behind the back pulley, over the top of both, and then down in front of the front pulley. Attach Lat Bar.

